

VACUUM CLEANER

OWNER'S MANUAL

DAEWOO

SPECIFICATIONS

Model RC-220

Rating 230V~50Hz

Watts 1500W

Weights(net) 4.1kg

Dimension(L X H X D) 350 X 280 X 210mm


Cord length 5 m

NAMES OF PARTS AND OPERATION TECHNIQUE

HOSE CONNECTION




- Connecting the hose : insert the hose firmly into the hose inlet. ("Click")

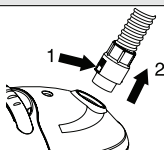


- Disconnecting the hose: press the button and pull the hose out of the vacuum cleaner.

 SUCTION CONTROL




- The suction power control at the hand grip enables you to control suction power.

EXTENSION PIPE

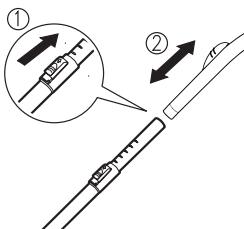

- Press the button in the direction shown by the arrows and pull (or push) the pipe.

WIDE SUCTION NOZZLE

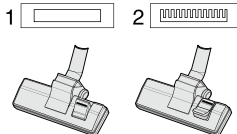


- Use this nozzle for cleaning both carpeted and uncarpeted floors.

COMBI CREVICE NOZZLE






CORD REWIND BUTTON

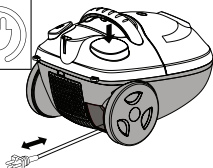


- Rewind the power cord by pressing the cord rewind button.

ON/OFF SWITCH

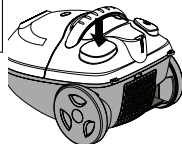


- Press the on/off switch.

 
DUST METER



- When the colour of the dust meter is changed to RED for long time, change the dust bag.

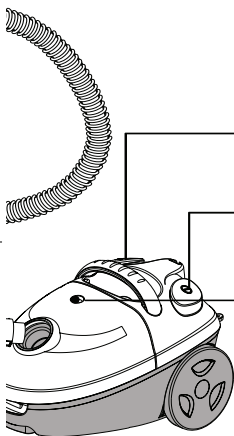


COMBI CREVICE NOZZLE

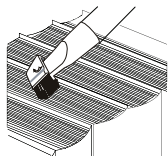


PRACTICAL PARKING

brush clip rest

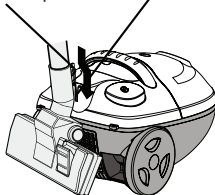

- If you want to stop vacuum cleaning for a while, you can place the brush clip into the rest.

STORAGE

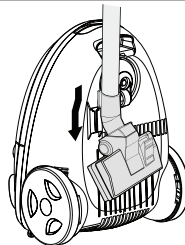


- If you want to store the cleaner, hitch the brush clip onto the vacuum cleaner.




NAMES OF PARTS AND OPERATION TECHNIQUE

EXHAUST FILTER

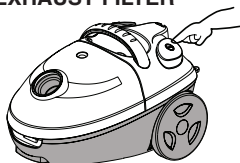

- Switch off.

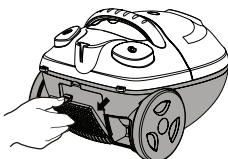


- Pull the filter case outwards from the cleaner.



- Separate the filter from the filter case and shake the dust out of the filter.

MOTOR PROTECTION FILTER

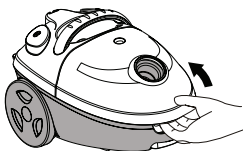

- Switch off and open the cover.




- Hold the cover while taking the filter out of the cleaner.




- Shake the dust out of the filter.


CHANGING THE DUSTBAG

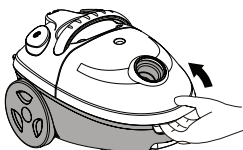

- Switch off and open the cover.

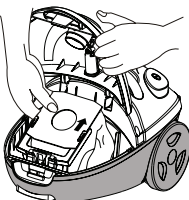

- Hold the cover while separating the dustbag from the dustbag holder.

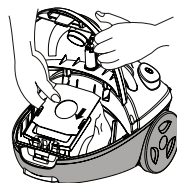

- Insert the new dust bag into the dust bag holder properly as shown in picture.


Note: If no dustbag has been placed into the dustbag holder, the cover cannot be closed.

PRECAUTIONS FOR SAFE USE


This vacuum cleaner should only be used for normal dry household dust and dirt. The manufacturer cannot be responsible for any damage caused by use or operation of the cleaner contrary to these instructions.

If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.


- Do not vacuum areas which contain moisture or water and inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag or cause a fire.

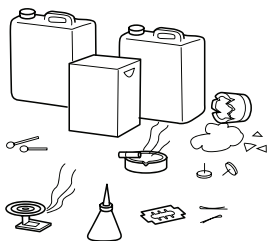


- When rewinding the power cord, hold the plug body before pressing the cord rewind button to prevent whipping.
- Do not pull the power cord beyond the specified length.

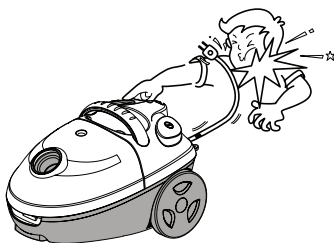

- Make sure a dust bag and a motor protection filter are always inserted.

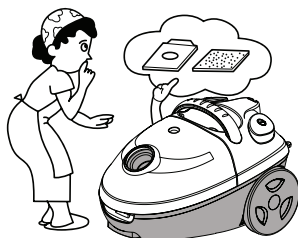

- This product provided with a cable which, if damaged, must be replaced by a repair shop authorized by the manufacturer since special tools are required.

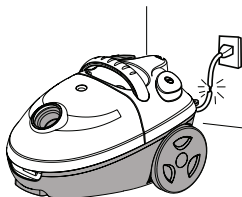

BEFORE ASKING FOR SERVICE

■ Before Asking for Service, please check each item below if you have trouble with your cleaner.

Problem	Check Point	Measure
Suction power is weak.	<ul style="list-style-type: none">• Dust bag• Pipe or hose	If dust bag is dirty, replace it. If clogged or blocked, remove the object.
The cleaner does not work.	<ul style="list-style-type: none">• Power cord• on/off switch	Check if power cord is plugged. Check if the power switch is turned on.
Power cord does not rewind.	<ul style="list-style-type: none">• Power cord	Pull the power cord out a little and press the cordwind button.

Disposal of Used Electrical & Electronic Equipment



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.